

# EPSON PERFECTION V600 PHOTO

EPSON PERFECTION V600 PHOTO

Remove dust and scratches with this versatile, 6400 dpi scanner, featuring advanced DIGITAL ICE™ technologies for both film and photos.


Scan all your prints, negatives and slides quickly and efficiently. Complete with film holders it handles just about any size and format, including 35 mm filmstrips, mounted slides and full panoramic medium format film.

Advanced DIGITAL ICE technologies make it easy to remove dust and scratches from film and photos, and you can check every detail in your images with the resizable preview window.

Featuring Epson ReadyScan LED technology, you can start scanning instantly with no warm-up time. You also use less energy when you scan, which is better for the environment and also saves you money.

And whatever you scan you can be sure of capturing every detail with high-quality 6400 dpi optical resolution with Epson Matrix CCD® technology.

- High-quality 6400 dpi film and photo scanner
- Restore film and photos with DIGITAL ICE technologies
- Make quick scans and save energy with Epson ReadyScan LED technology
- Scan a wide range of photo and film formats
- Convenient resizable preview window
- Scan to multi-page searchable PDF

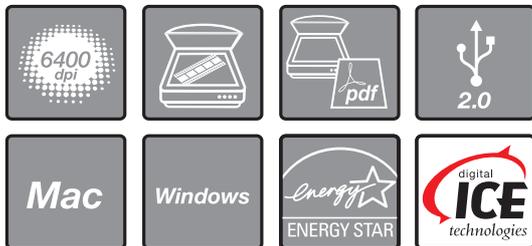

Better Products for a Better Future™

**EPSON**<sup>®</sup>  
EXCEED YOUR VISION

## PRODUCT SPECIFICATIONS

<b>SCANNER TYPE</b> Optical resolution  Optical density Document size  Interface	Flatbed colour image scanner Main 6400 dpi x Sub 9600 dpi (Optical resolution as defined by ISO 14473) 3.4 Dmax Flatbed: A4, US letter size document TPU: 35 mm x 12 frames strip film Positive/Negative 35 mm x 4 Mounted film Positive Medium format 6 x 22 cm Positive/Negative USB 2.0 Hi-speed
<b>CONFIGURATION</b> Photo-electric device Light source Sub-scanning method	12-line colour Epson Matrix CCD with on chip Micro Lens White LED, IR LED Fixed documents and moving carriage
<b>PERFORMANCE</b> Output resolution	50-6400, 9600, 12800 dpi Internal 48-bit colour (281.5 trillion colours) Output 48-bit colour (281.5 trillion colours) 24-bit (16.7 million colours) 16-bit (65,536 gray scale levels) 8-bit (256 gray scale levels) 1-bit (monochrome)
<b>FUNCTIONS</b> Dust and scratch removal – Film Dust and scratch removal – Photo Image quality enhancement features  Productivity features	Hardware: DIGITAL ICE / Software: Yes Hardware: DIGITAL ICE / Software: Yes Backlight Correction, Dust Removal for Film, Colour Restoration, Grain Reduction, Selectable Tone of Auto Exposure, Unsharp Mask with Noise Reduction, Descreening with Document Type Optimizer, Tone Curve Adjustment with Histogram, Colour Palette tool, Print Image Matching-II (JPEG & TIFF)  4 Easy Push Buttons linked to Epson Event Manager, Stand-alone application and Scan to File feature, Resizable Preview Window, Multi-purpose User Interface, Multi-document Auto Detection, Auto Photo Orientation, Multi-document Auto Cropping, Auto Skew Correction, Multi-marquee, Film Scanning thumbnail preview, Multiple page scan to PDF with scanner buttons, High compression PDF, Searchable PDF (Windows only), Text Enhancement, Colour Enhance and Drop-out features, Correct Document Skew
<b>SOFTWARE</b>	Epson Scan 3.8 Epson Event Manager Epson Copy Utility Adobe Photoshop Elements 7 (PC) Adobe Photoshop Elements 6 (Mac) ABBYY FineReader® 6 Sprint Plus (PC) ABBYY FineReader® 5 Sprint Plus (Mac)
<b>SCANNING SPEED</b> Reflective scanning  Film and transparencies	A4 preview: 4 seconds A4 line art 600 dpi (best/draft): 23/18 seconds A4 colour 600 dpi (best/draft): 23/18 seconds A4 colour 1200 dpi (best/draft): 150/91 seconds Single frame 35 mm positive film 4800 dpi (best/draft): 81/71 seconds Single frame 35 mm negative colour film 4800 dpi (best/draft): 100/88 seconds
<b>ENVIRONMENTAL CONDITIONS</b> Temperature Humidity	10°C to 35°C (operating) 10% to 80% without condensation (operating)
<b>OPTIONS</b> Warranty	1 year standard. Optional extension to 3 years, subject to availability
<b>ELECTRICAL SPECIFICATIONS</b> Voltage Power consumption	AC 100-240V, 50-60Hz 16.5 Watts operating, 1.6 Watts in sleep mode
<b>GENERAL</b> Dimensions (WxDxH) Weight	280x485x118 mm Approx. 4.0 kg

## EPSON PERFECTION V600 PHOTO

### WHAT'S IN THE BOX

- Epson Perfection V600 Photo scanner with built-in transparency unit
- 2 x Film holders: 35 mm film strip x 12 / 4 x mounted 35 mm slides (reversible) medium format 6 x 22 cm
- Software CD-ROM
- Adobe® Photoshop® Elements DVD
- 'Start Here' guide
- AC adapter
- Power cable
- Warranty document
- USB cable



For further information please contact your local Epson office or visit [www.epson-europe.com](http://www.epson-europe.com)

Austria 0810/20 01 13 (0,07 €/Min.) Belgium 070/350120 (0,1735 €/min.) Czech 800/142 052 Denmark 44 50 85 85 Finland 0201 552 091 France 09 74 75 04 04 (0,12€/min) Germany 01805/23 41 10 (0,14 €/Min.) Greece 210-8099499 Hungary 06800 147 83 Ireland 01 436 7742 Italy 02-660321 10 (0,12 €/min.) Luxembourg 900/43010 (0,24 €/min.) Middle East +9714 8818934 Netherlands 0900-5050808 (0,05 €/oproep + 0,15 €/min.) Norway 22 06 42 80 Poland 0-0-800 4911299 (0,16 zł/min.) Portugal 707 222 111 Russia (095) 777-03-55 Slovakia 0850 111 429 South Africa (+2711) 465-9621 Spain 93 582 15 00 Sweden 0771-400135 (Mobilsamtal – 0,99 kr/min, Lokala samtal – 0,30 kr/min, Utlandssamtal – 0,89 kr/min) Switzerland 0848 448820 (4-8 cent./min.) Turkey (0212) 3360303 United Kingdom 0871 222 6702

Trademarks and registered trademarks are the property of Seiko Epson Corporation or their respective owners. Product information is subject to change without prior notice.